


## ■ Application Note

 
Shure MX396 connection to Choibox CS-RGB8g.

### - Dip Switch Setting


1. Open Shure Mic cover

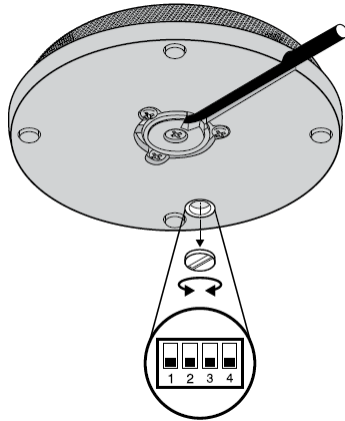

2. Change dip switch setting.

Button Behavior	DIP Switch Setting
<b>Momentary:</b> When pushed, SWITCH OUT (red wire) falls to 0 V. When released, SWITCH OUT returns to +5 V.	

3. Put RJ45connector

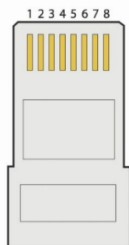

Shure Mic Black -> RJ45 Pin #8 LED IN  
Shure Mic Red -> RJ45 Pin #5 Switch Out  
Shure Mic Silver -> RJ45 Pin #3 GND

4. Put jumper on the Choibox Pin # 1 and pin#2
5. Choibox Control Pin #3 LED control from control frame or DSP
6. Choibox Control Pin #4 Switch OUT to control frame or DSP
7. Choibox Control Pin #5 NOT in use